



FMZ96 440V

FMZ96 440V, Phasemeter

Code: M13537.

- > Scale: 240° P1
- > System: Single-phase
- > Accuracy: 1,5
- > Measurement Range (V): 440
- > Modules: 96x96

Description

- Does not need an auxiliary power supply
- DIN box with dimensions 96 and 144 mm.
- Precision class 1,5
- Built-in electronic converter
- Balanced single and three-phase circuits

Application

Measurement of $\cos\varphi$ in balanced or unbalanced single and three-phase circuits



FMZ96 440V

Phasemeters

Code: M13537.

Specifications

Mechanical characteristics

Size (mm) width x height x depth	96 x 96 x 101.2 (mm)
Fastening	Panel
Weight (kg)	0,45

Environmental characteristics

Protection class	Panel: IP 52 (Front), IP 00 (Terminals)
Storage temperature	-25...+40 °C
Operating temperature	+10 ... +30 °C

Standards

Certifications	UL
Electrical safety, Maximum height (m)	2000
Standards	BS 89, UNE-EN 60051, IEC 144, UL94, DIN 43780, IEC 51, UNE 21318

Current measurement circuit

Consumption	0,75 VA
Sampling frequency	20 ... 100 Hz
Nominal current (In)	... 5 A
Allowable overload	1,2 In permanent / 5 In during 30s / 10 In during 5s / 40 In during 1s

Voltage measurement circuit

Consumption	4 VA
Sampling frequency	40 ... 70 Hz
Maximum permanent measurement voltage	1,2 Vn permanent rated voltage / 2 Vn during 5s

Electrical characteristics

Insulation voltage, circuit	2 kV, 50 Hz, 1 min entre mecanismo y caja
-----------------------------	---

Measurement accuracy

Accuracy	± 1,5 % FE
----------	------------

FMZ / FTC

Single phase and three-phase 240° electronic phase-meters

CODE	TYPE	Scale	Accuracy	Modules
Single-phase				
M13531.	FMZ96 100/√3	240° P1	1,5	96x96



FMZ96 440V

Phasemeters

Code: M13537.

CODE	TYPE	Scale	Accuracy	Modules
M13532.	FMZ96 110 / $\sqrt{3}$	240° P1	1,5	96x96
M13533.	FMZ96 100V	240° P1	1,5	96x96
M13534.	FMZ96 110V	240° P1	1,5	96x96
M13535.	FMZ96 230 V	240° P1	1,5	96x96
M13536.	FMZ96 400V	240° P1	1,5	96x96
M13537.	FMZ96 440V	240° P1	1,5	96x96
M13538.	FMZ96 500V	240° P1	1,5	96x96
M13541.	FMZ144 100 / $\sqrt{3}$	240° P1	1,5	144x144
M13542.	FMZ144 110 / $\sqrt{3}$	240° P1	1,5	144x144
M13543.	FMZ144 100V	240° P1	1,5	144x144
M13544.	FMZ144 110V	240° P1	1,5	144x144
M13545.	FMZ144 230V	240° P1	1,5	144x144
M13546.	FMZ144 400V	240° P1	1,5	144x144
M13547.	FMZ144 440V	240° P1	1,5	144x144
M13548.	FMZ144 500V	240° P1	1,5	144x144
Balanced three-phase				
M1353C.	FTZ96 100V	240° P1	1,5	96x96
M1353D.	FTZ96 110V	240° P1	1,5	96x96
M1353E.	FTZ96 230V	240° P1	1,5	96x96
M1353F.	FTZ96 400V	240° P1	1,5	96x96
M1353G.	FTZ96 440V	240° P1	1,5	96x96
M1353H.	FTZ96 500V	240° P1	1,5	96x96
M1354C.	FTZ144 100V	240° P1	1,5	144x144
M1354D.	FTZ144 110V	240° P1	1,5	144x144
M1354E.	FTZ144 230V	240° P1	1,5	144x144
M1354F.	FTZ144 400V	240° P1	1,5	144x144
M1354G.	FTZ144 440V	240° P1	1,5	144x144
M1354H.	FTZ144 500V	240° P1	1,5	144x144

Current range: 0.1 to 1.2 In. For the connection of transformers .../5A. Built-in electronic transducer.




FMZ96 440V

Phasemeters

Code: M13537.

Dimensions

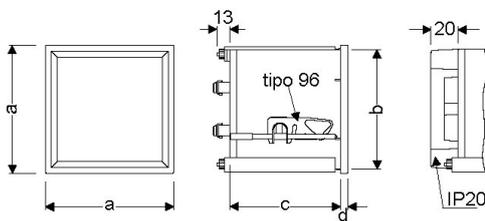

	a	b	c	d	e
96	96	91	95,5	5,7	92 ^{+0,8}
144	144	137	64,5	7,3	138 ⁺¹

Connections

